

# Straight Just Got A Whole Lot Easier!


## Instructions for Using **ALINE-SET™**

The Perfect Gauge Block


MADE IN USA




1. Nail ALINE-SETS to opposite ends of project to be straightened using one or two nails.

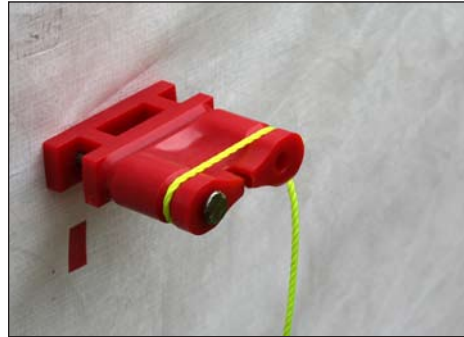


2. Tie your line to the first ALINE-SET using a simple loop with slip knot.

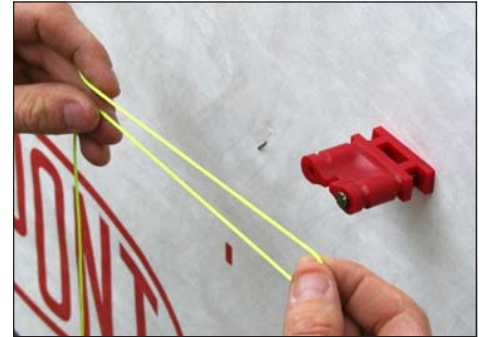


3. Loop the line at the opposite end.

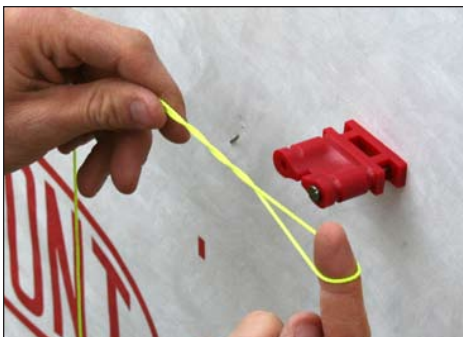

4. Twist the loop two to three times.

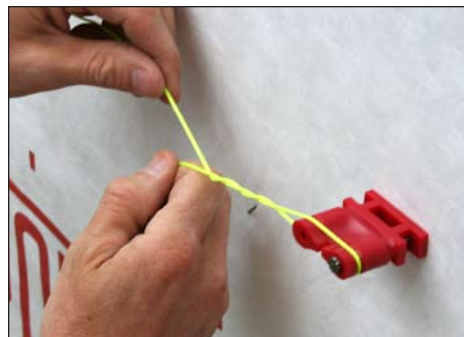


5. Place the twisted loop over the second ALINE-SET. Pull and feed the line around the ALINE-SET until tight.

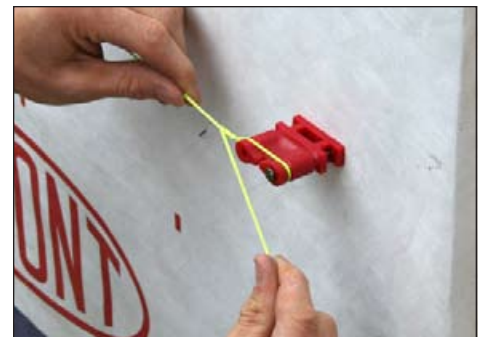

6. After your line is tight, pull the loose end of line back past the ALINE-SET.



7. A properly cinched line should look like the photo above.

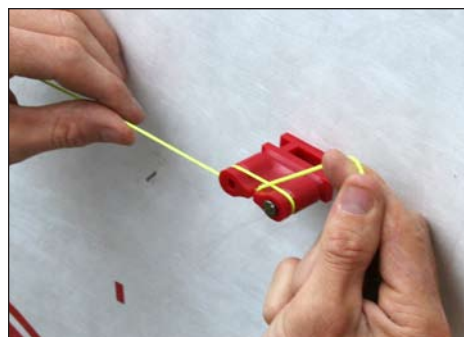

8. Finish by pulling your line into the notch for a strong hold and tight line.



9. When finished, pull the line from the notch and remove, then easily remove ALINE-SETS with your hammer claw.



[www.AlineSet.com](http://www.AlineSet.com)